




- 1) Remove the rubber covers.
- (2) Remove the screws.

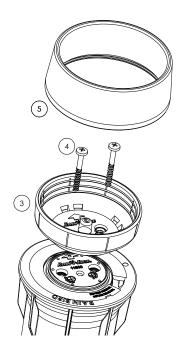

- 3 Place the inner cup on the nozzle housing.
- (4) Reinstall the screws.
- 5 Place the outer ring around the rotor case top.

