



Install the Rain Sensor in a position exposed to rainfall and out of sprinkler jets.


1

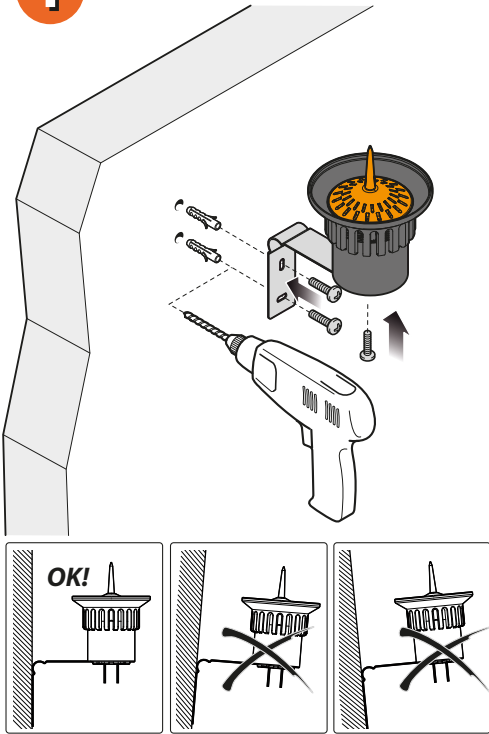

2

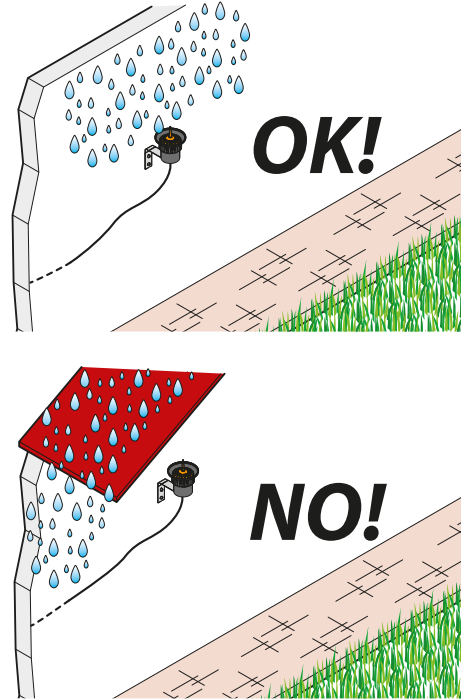


3

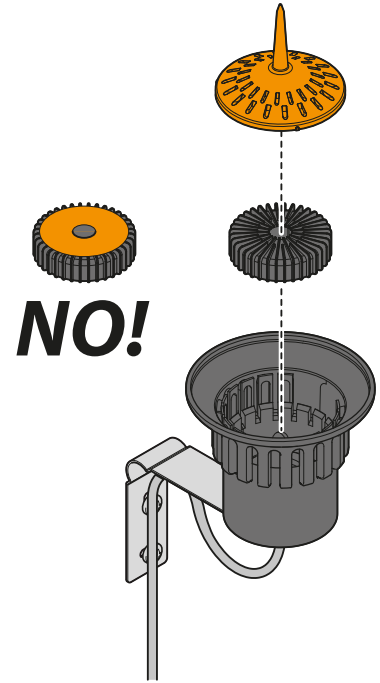

Rain Sensor (p/n): 90915

Connect the Rain Sensor to the timer.


1

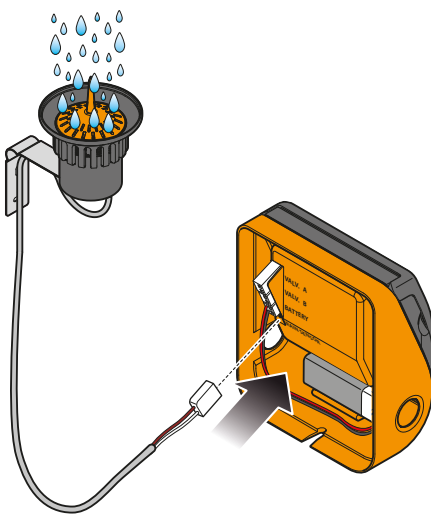

For timers (p/n):
 8410 - 8411 - 8412 - 8413 - 8414
 8415 - 8419 - 8483 - 8485 - 8486
 8487 - 8488 - 8489


Rain Sensor (p/n): 90915

2

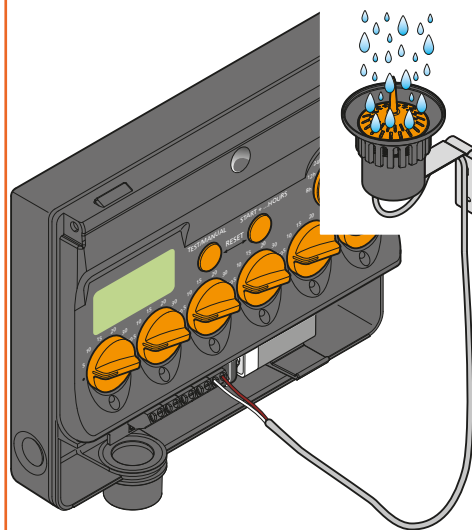

For timers (p/n):
 8058 - 8060

3

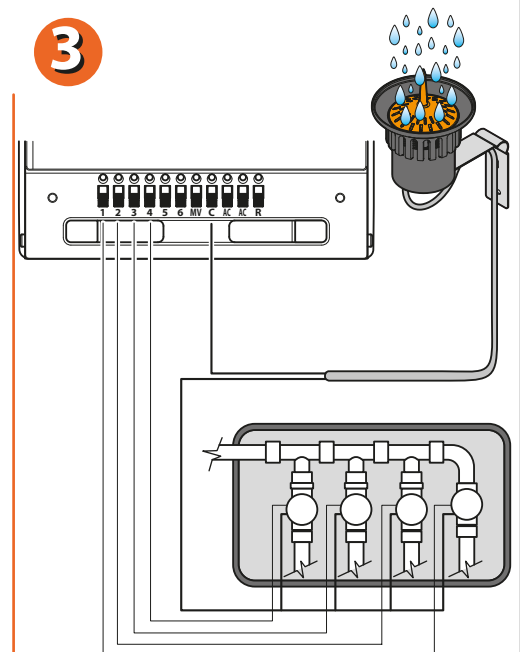

For timers (p/n):
 8014 - 8016